

Xtender - USB Adapter

Enable prepaid card payments via your Nayax VPOS Touch and Onyx card readers

Connect any COTS USB card reader to VPOST or Onyx



With Xtender, you can connect any USB card reader to your VPOST or Onyx devices. This can come in handy if your machines are located in a closed-loop environment in which customers use their own type of card (employees or students, for example).

VPOST or Onyx may not be able to read these cards because:

- A. The frequency is not supported**
- B. The card numbers are encrypted**

But with Xtender, this is no longer a problem. A simple connection allows your Nayax card readers to accept any payment.




Installation and Setup



You need:

1. VPOS Touch or Onyx
2. Cable with "External Reader" branch (RJ11 socket)
3. Xtender
4. Your choice of a USB external card reader

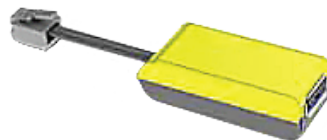

ONYX (or VPOST)
to cable

"External Reader"
branch to Xtender

Xtender to USB
card reader